


Selection Settings

The **Selection Settings** tab is used to control the way nodes and links are selected within InfoWater Pro.

To change selection settings, go to the **InfoWater Pro** tab > **Project** group, select the **Preferences** button, and then click the **Selection Settings** tab in the dialog.

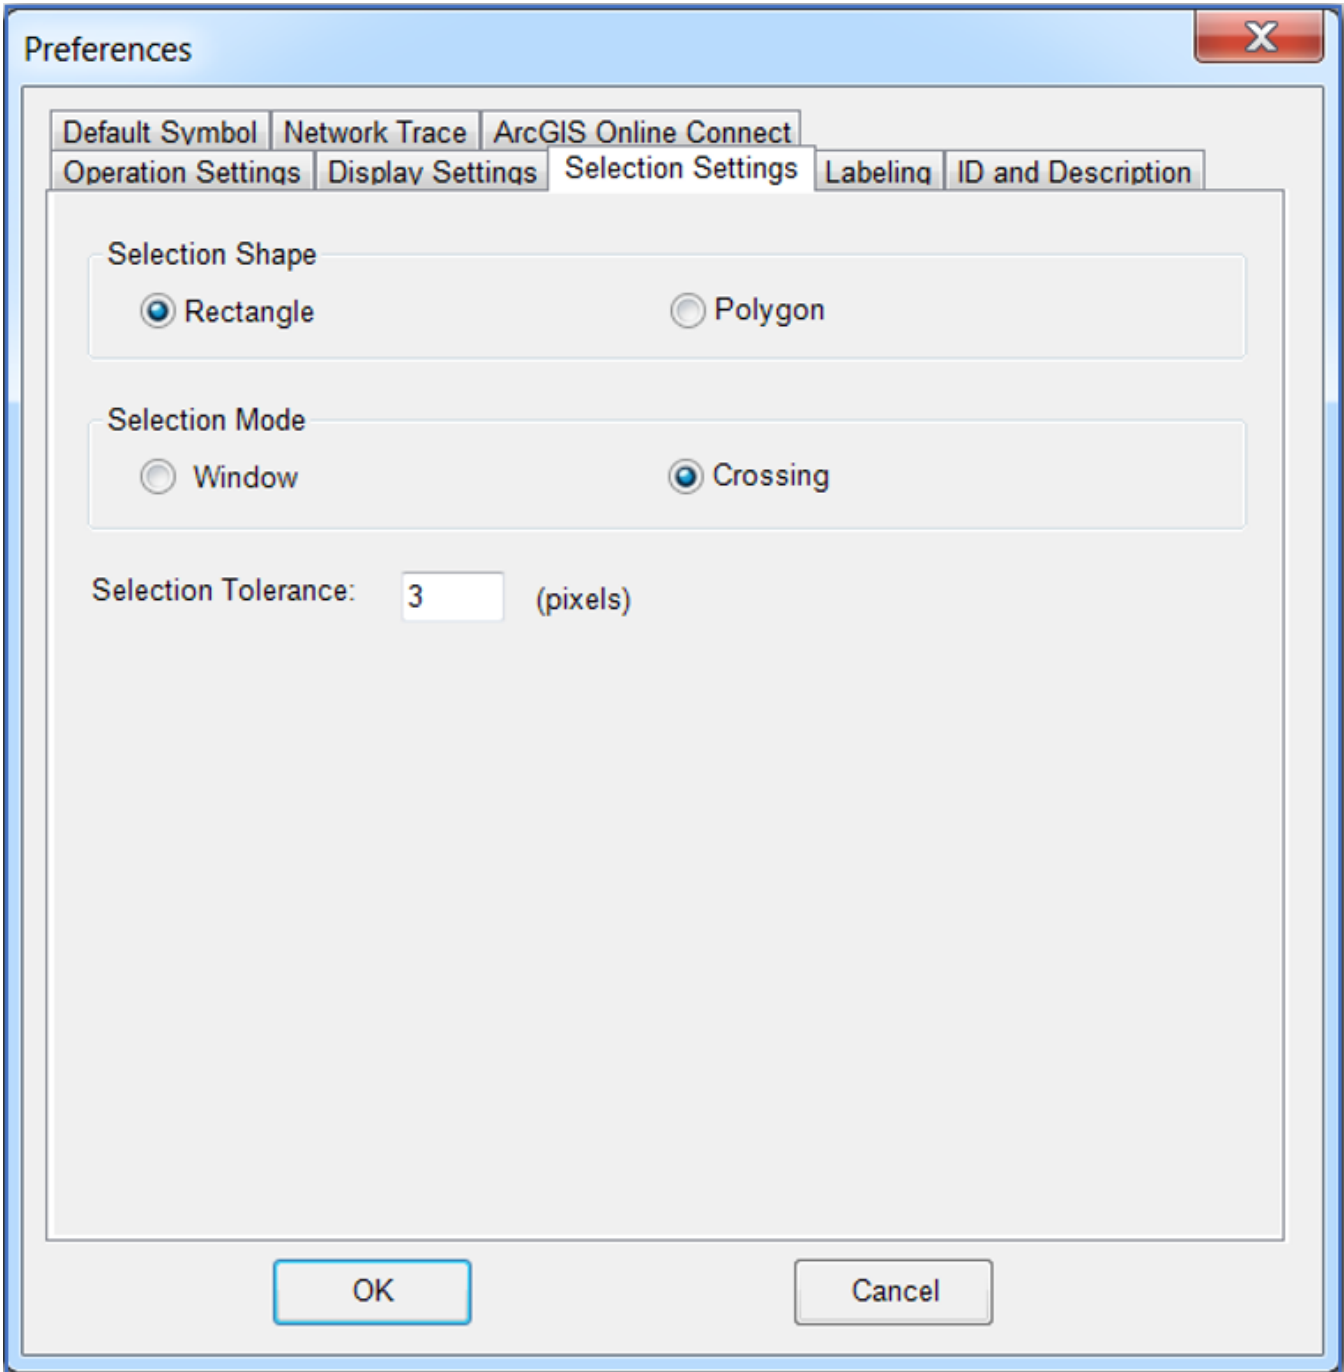

Selection Shape - This option specifies the default selection type as rectangle or polygon.

Selection Mode - This option specifies the default selection type as a window selection (completely surround the elements) or a crossing (merely touching the desired elements).

Selection Tolerance - This input specifies the size of selection buffer.

OK - Click to save and exit from the **Preferences** dialog.

Cancel - Click to exit without saving from the **Preferences** dialog.