

# Flush Sequence Manager

The Flush Sequence Manager is used to specify sequencing and view sequence results within a flush zone. You can open the Flush Sequence Manager from the UDF window pane.



[Back to: Help Documentation](#)

**Section Pages**