 


Flush Zone Manager


Use the Flush Zone Manager to create and manage parameters and characteristics for specific flush zones within a distribution system. You can open the **Flush Zone Manager**  from the UDF window pane.



[Back to: Help Documentation](#)

Section Pages

- [Flush Zones](#)
- [UDF - Flush Zone Manager](#)

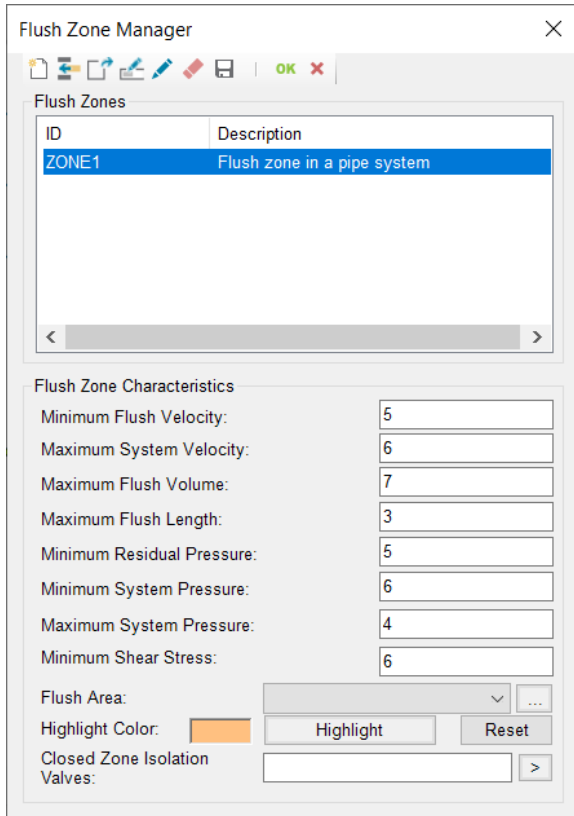

The screenshot shows the 'Flush Zone Manager' dialog box. It has a title bar with a close button (X) and a toolbar with icons for file operations and 'OK'/'Cancel' buttons. The main area is divided into two sections: 'Flush Zones' and 'Flush Zone Characteristics'.

Flush Zones

ID	Description
ZONE1	Flush zone in a pipe system

Flush Zone Characteristics

Minimum Flush Velocity:

Maximum System Velocity:

Maximum Flush Volume:

Maximum Flush Length:

Minimum Residual Pressure:

Minimum System Pressure:

Maximum System Pressure:

Minimum Shear Stress:

Flush Area: ...

Highlight Color:

Closed Zone Isolation Valves: >