

# InfoWater Pro Suite

InfoWater Pro Suite include the following extensions: Multi-Species (MSX) Model, Hydraulic Calculator, Pipeline Costing, Info360 Connect, Uni-Directional Flushing (UDF), InfoSurge.

This chapter contains the following topics:

- [InfoSurge Pro](#)
  - [Installation and Configuration](#)
  - [InfoSurge Capabilities](#)
  - [Methodology of InfoSurge](#)
    - [Fundamentals of Hydraulic Transient](#)
    - [Numerical Solution Methods](#)
    - [Hydraulic Characteristic of Valves](#)
    - [Hydraulic Characteristics of Pumps](#)
    - [Pressure Surge Control Devices](#)
    - [Choice of Surge Protection Strategy](#)
    - [Cavitation](#)
    - [Pressure Sensitive Demand](#)
    - [Intrusion](#)
  - [InfoSurge User Interface](#)
    - [InfoSurge Pipe Wave Speed](#)
    - [InfoSurge Pump Surge Data](#)
    - [InfoSurge Active Valve Data](#)
    - [InfoSurge Junction Demand Change Data](#)
    - [InfoSurge Pump Operation Change](#)
    - [InfoSurge Active Valve \(AV\) Operation Change](#)
    - [InfoSurge Protection Device](#)
    - [Surge Calculators](#)
    - [Identify Surge Elements](#)
  - [Creating Transients](#)
    - [Pump Operation](#)
    - [Valve Operation](#)
    - [Junction Demand Change](#)
  - [Running a Surge Analysis](#)
  - [Viewing Surge Results](#)
  - [General Surge Modeling Tips](#)
  - [Frequently Asked Questions](#)
  - [Troubleshooting](#)
  - [InfoSurge Quick Start Tutorial](#)
- [Multi-Species Model](#)
  - [Base Model](#)
  - [General Tab](#)
  - [Species Tab](#)
  - [Term Tab](#)
  - [Parameter Tab](#)
  - [Constant Tab](#)
  - [Parameters, Initial Quality, and Water Quality Source](#)
    - [Multi-Species Node Quality](#)
    - [Multi-Species Link Quality](#)
    - [Multi-Species Link Parameter](#)
    - [Multi-Species Tank Parameter](#)
- [InfoWater Pro UDF](#)
  - [UDF Overview](#)
  - [UDF Configuration](#)
    - [Set UDF Layer](#)
    - [Auto Associate Hydrant](#)
    - [Auto Associate Valve](#)
    - [Import UDF Data](#)
    - [Edit UDF Data](#)
    - [Assign Emitter Coefficient](#)
    - [Interpolate Hydrant Elevation](#)
    - [Calculate Length of Hydrant Lateral](#)
    - [Color Code Flush Zones](#)
    - [Draw Hydrant-Pipe Association Linkage](#)
    - [UDF Data QA/QC](#)
  - [UDF Options](#)
  - [UDF Interface](#)
    - [Flush Zone Statistics](#)
    - [Notify Affected Customers](#)
    - [The UDF Attribute Browser](#)
  - [Flush Zone Manager](#)
    - [Flush Zones](#)
    - [UDF - Flush Zone Manager](#)
  - [Flush Sequence Manager](#)
    - [Flush Sequences](#)
    - [Flush Sequence Manager - General Tab](#)

- Flush Sequence Manager - Operations Tab
- Flush Sequence Manager - Parameters Tab
- Flush Sequence Manager - Pipe Results Tab
- Flush Sequence Manager - Critical Junctions Tab
- Flush Sequence Manager - Notes
- UDF Field Journal
- Demand Analyst
  - DemandAnalyst Interface
    - Demand Analyst Workflow
    - Usage Partition
    - Edit Mapping
  - Demand Analyst Overview
  - Demand Analyst Preface
  - Demand Analyst tabs
    - Pattern Tab
    - Pattern Verification Tab
    - Meter Pattern Tab
    - Junction Pattern Tab
    - Export Pattern
  - Create Thiessen Polygon Layer
  - Meter Connection Dialog Box