


Import and Export Data

XPSWMM has the ability to import and export data from other databases and file formats.

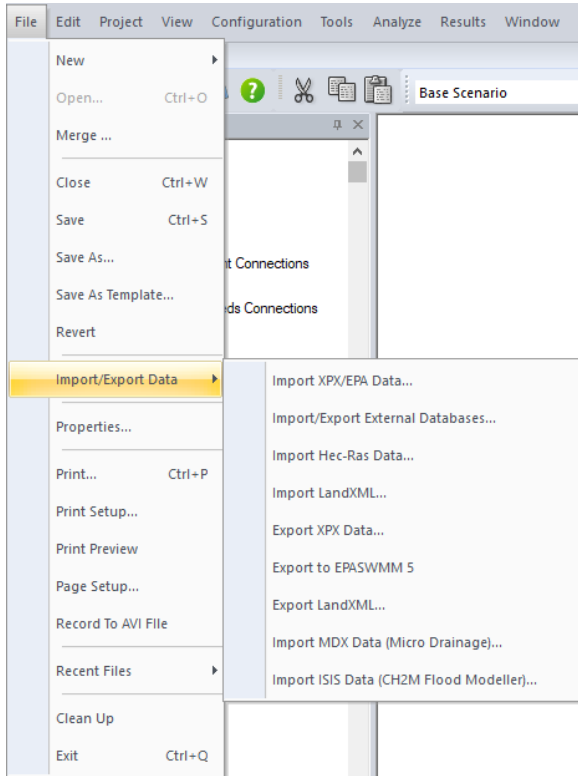

On this section:

- [Export to EPASWMM 5](#)
- [Import and Export External Databases](#)
- [Import and Export LandXML Data](#)
- [Import HEC-RAS Data](#)
- [XPX Format File](#)

The Import/Export data options are:

- Import data in [XPX/EPA Format](#)
- Import, export or define an active link to data in any OLE/DB or ODBC database using [Import/Export External Databases](#) wizard
- [Import HEC-RAS Data](#).
- [Import LandXML Data](#)
- [Export XPX Data](#)
- [Export to EPASWMM 5](#) model

EPA SWMM 4.4 and 5.0 files may be converted to XPX files using the standalone EPA-SWMM Data File Reader. This program may be accessed via the Tools -> [Launch Application](#) menu.