


Plot Scale

The **Plot Scale** option allows you to set a print scale of 1:X, which is applied to the X and Y direction of the plan. The scale entered is added to the Plan Title Block for printing.

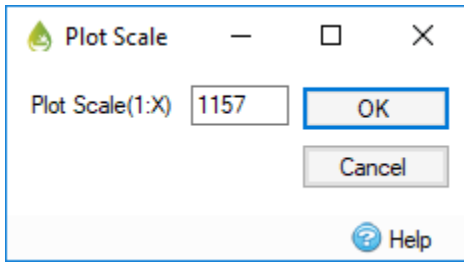

The image shows a dialog box titled "Plot Scale" with a green leaf icon. It contains a text input field labeled "Plot Scale(1:X)" with the value "1157" entered. To the right of the input field are two buttons: "OK" and "Cancel". At the bottom right of the dialog box is a "Help" button with a question mark icon. The dialog box has standard window controls (minimize, maximize, close) in the top right corner.

To access the **Plot Scale** form:

1. Go to the **Plan** ribbon and click the **Plot Plan** button.
2. Right-click the Plan and then select **Set Plot Scale**.