

Runoff Coefficient Calculator

Allows the **Volumetric Runoff Coefficient** to be calculated from **Land Use** and **Overland Slope**.



[Back to: Help Documentation](#)

Runoff Coefficient Calculator

Land Use:

Overland Slope:

Runoff Coefficient:

OK Cancel

Help

As options are selected from the drop down lists, the appropriate runoff coefficient is selected.

The runoff coefficient is calculated by looking up the values in table 1 in document [Hydraulics-07-F.pdf](#), authored by the Oregon Department of Transportation Highway Division.

Local guidelines may differ from the calculator values. Where values differ the locally recommended values should be used.

Section Pages