

Change Templates

xpdrainage provides users the option to change the currently assigned templates for automating the design of **Inflows**, **Junctions**, **Stormwater Controls** and **Connections**

The Change Template menu option can be accessed by either right-clicking the entries under Inflows, Junctions or Stormwater Controls in the **Tree View** panel, or by right-clicking on one of these features (including Connections) in the **Plan View** window.



[Back to: Help Documentation](#)



Section Pages

- [Change Templates](#)

Workflow - What's next...?



Connect Inflows to your **Stormwater Control**, specify **Inlets** or **Outlets** or connect to another Stormwater Control or **Junction**.

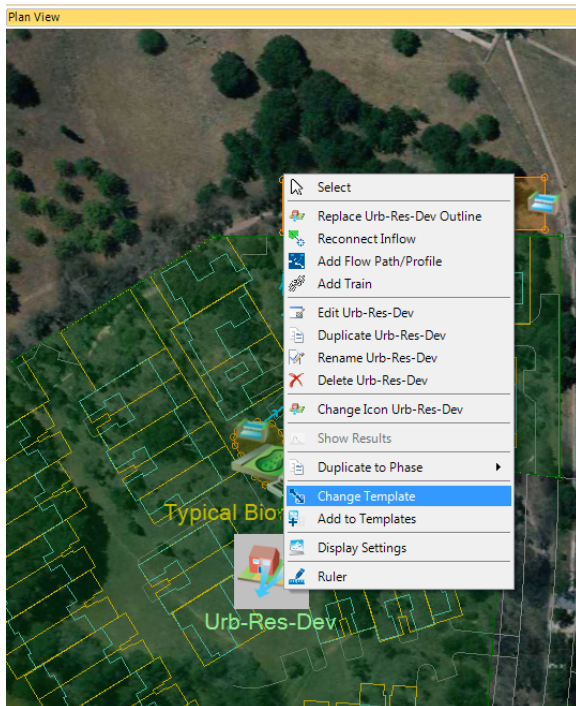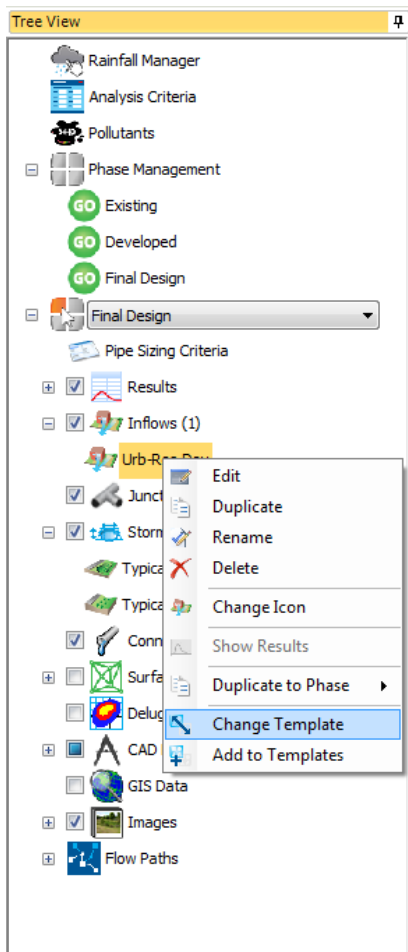

Once the Change Template dialog box is open, choose the appropriate template for the selected object. The icon and label can also be customized to suit the project's design.

