


# Percentage Flow

Allows a single percentage to be specified that determines how much of the flow entering the inlet will bypass.

If a percentage of 0% is specified this means that all water entering the inlet will pass straight into the Stormwater Control or Junction. Whereas a value of 100% would mean that no water enters the system.

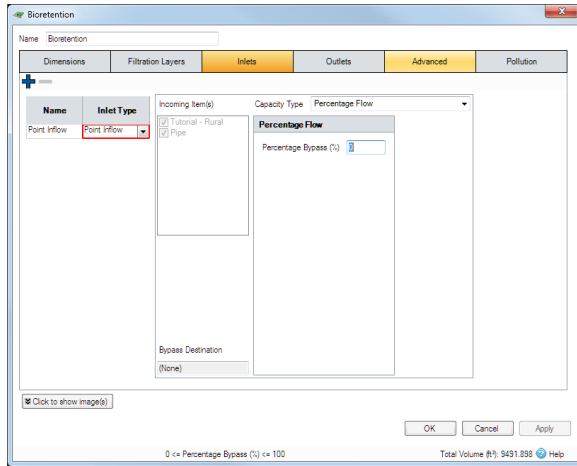

[Back to: Help Documentation](#)

## Section Pages

- [Low/High Flow](#)
- [Percentage Flow](#)
- [Rated by Flow](#)

## Workflow - What's next...?



**Connect Inflows** to your **Stormwater Control**, specify **Percentage Flow** or **Outlets** or connect to another **Stormwater Control** or **Junction**.