

# Change Templates

xpdrainage provides users the option to change the currently assigned templates for automating the design of [Inflows](#), [Junctions](#), [Stormwater Controls - SWC](#) [Stormwater Controls \(SWC\)](#) and [Connections](#).

---

The Change Template menu option can be accessed by either right-clicking the entries under Inflows, Junctions or Stormwater Controls in the [Tree View](#) panel, or by right-clicking on one of these features (including Connections) in the [Plan](#) window.



[Back to: Help Documentation](#)



## Section Pages

- [Change Templates](#)

## **Workflow - What's next...?**



[Inflows](#) connect to either [Junctions](#) or [Stormwater controls](#) via [Inlets](#) . Specify an [Change Templates](#) on these objects then choose to connect to another Junction or Stormwater Control.

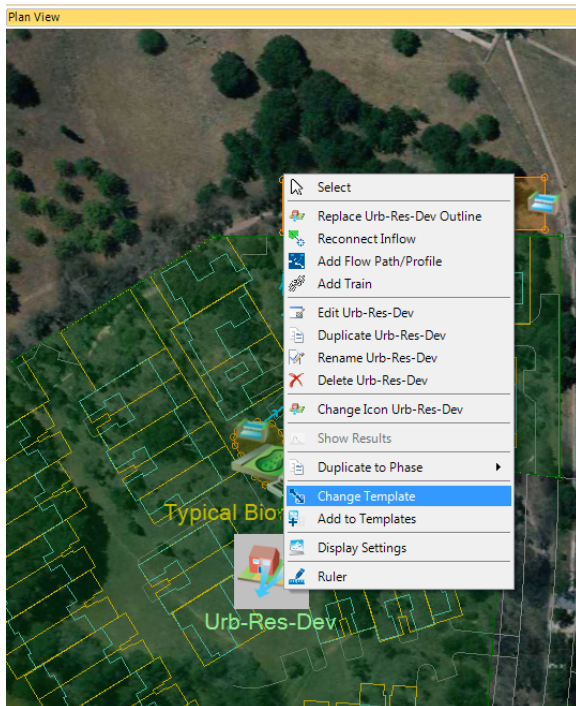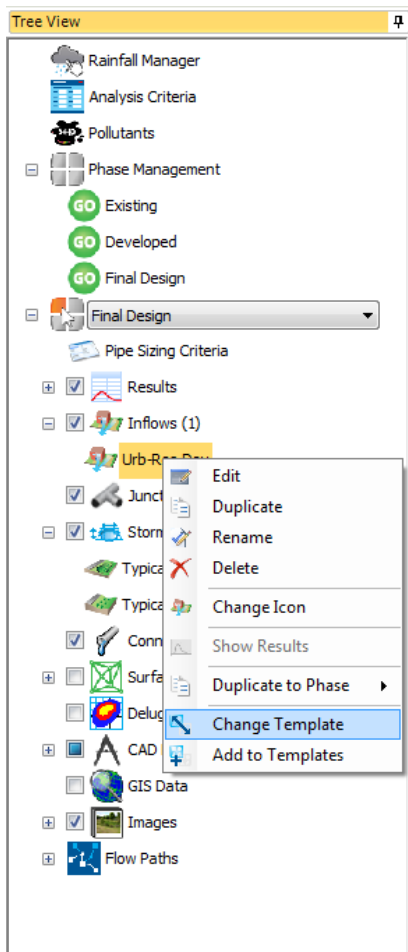

Once the Change Template dialog box is open, choose the appropriate template for the selected object. The icon and label can also be customized to suit the project's design.

