


# Import Summary

After the information has been imported from the LandXML file a breakdown of the information that has been loaded is displayed

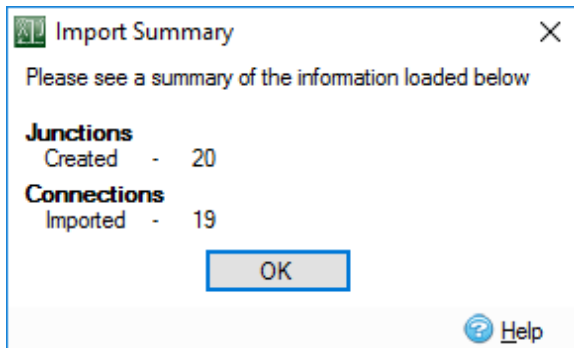

[Back to: Help Documentation](#)



This is broken down based on the type of data that has been loaded.

- **New** - A new Connection or Junction has been created based on the information in the file.
- **Updated** - The dimensions and location of the Connection or Junction have been merged with the existing item of the same name. This will maintain the additional information associated with an item. i.e. Inlets and Outlets.

*Note: Where a SWC can also be updated, however on the location is updated.*

## Section Pages

- File Menu
  - Preferences
  - Transmit Design
  - Hard Copy Headings
  - Print
  - Plot Profile
- Quick Access Toolbar
- Plan Ribbon
  - Ruler
- Import Ribbon
  - GIS Import Wizard
  - Import Pipe Network
  - CSV Import Wizard
  - Load CAD Wizard
  - Load GIS Wizard
- Rainfall Ribbon
  - Rainfall Viewer
- Build Ribbon
- Preliminary Sizing Ribbon
  - Synchronise Manhole Invert Levels
- Analysis Ribbon
- Results Ribbon
- Export Ribbon
  - GIS Export Wizard
  - Export Pipe Network
  - CSV Export Wizard
- Help Ribbon
- Context Sensitive Ribbons