


Pollutant Removal Methods

Pollutant Removal data is added via the Pollution tab of a Stormwater Control.

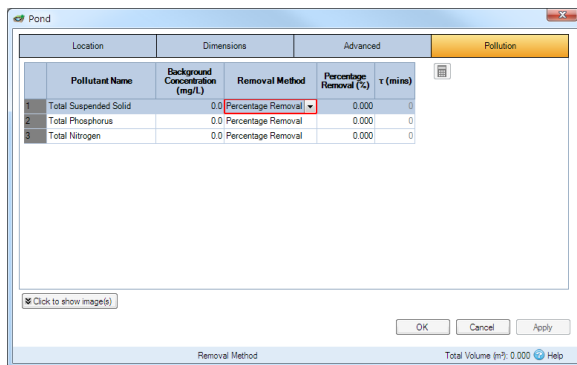

There are two pollutant removal methods available in **xpdrainage**:

1. [Percentage Removal](#)
2. [First Order Decay](#)



[Back to: Help Documentation](#)

Section Pages

- [Pollution Concentration](#)
- [Pollutant Removal Methods](#)
 - [Percentage Removal](#)
 - [First Order Decay](#)

Workflow - What's next...?



Connect **Inflows** to your **Stormwater Control**, specify **Inlets** or **Outlets** or connect to another Stormwater Control or **Junction**.