



Simple Junction

Simple Junctions are typically used to connect two open connections, such as the [Rectangular Channel](#), [Trapezoidal Channel](#) and [Triangular Channel](#) connection types, where there is a change in the dimensions or slope of the channel or where an open connections meets a [Pipe](#) connection. The Simple Junction may also be used for pipe joins without a manhole or for joining other Connection types.

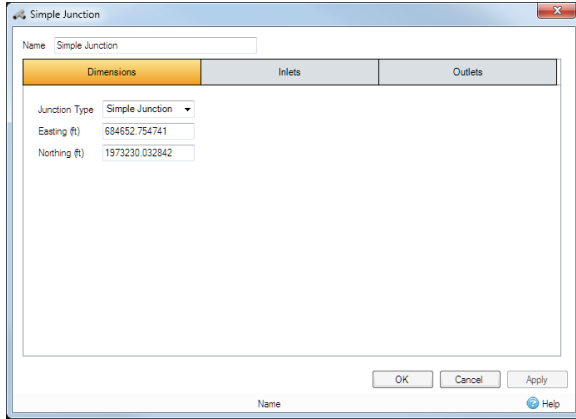

Special rules apply to Simple Junctions during analysis. The levels are inferred from joining connections where these exist, where Simple Junctions are used to join Connections without levels flow is assumed to pass straight through unless restricted by an Outlet.

 [Back to: Help Documentation](#)

Section Pages

- [Simple Junction](#)
- [Manhole](#)

Workflow - What's next...?



Connect Inflows to your **Stormwater Control**, specify **Inlets** or **Outlets** or connect to another Stormwater Control or **Junction**.