

Help Documentation

The **Help Documentation** portion of the [Resource Center](#) provides the essential information users need to work with XPSWMM and XPStorm software packages.

Follow the links on the left hand sidebar to view the available help topics, or click the navigation links at the bottom of the page to view the next or previous pages in the documentation.

The Help Documentation contains the following topics:

- [An XP Overview](#)
 - [The Model Structure](#)
 - [Philosophy](#)
 - [Strategy](#)
 - [Is a 2D or 1D-2D Model Feasible](#)
 - [Analytical Engine](#)
 - [The Database](#)
 - [Expert System Capabilities](#)
- [The XP User Interface](#)
 - [The Window](#)
 - [The Pointing Device](#)
 - [The Menu Bar](#)
 - [File Menu](#)
 - [Import and Export Data](#)
 - [Export to EPASWMM 5](#)
 - [Import and Export External Databases](#)
 - [Import and Export LandXML Data](#)
 - [Import HEC-RAS Data](#)
 - [XPX Format File](#)
 - [Edit Menu](#)
 - [Project Menu](#)
 - [The View Menu](#)
 - [The Configuration Menu](#)
 - [The Tools Menu](#)
 - [Calibrate Model](#)
 - [The Analyze Menu](#)
 - [Results Menu](#)
 - [Graphical Encoding Options](#)
 - [The Window Menu](#)
 - [The Help Menu](#)
 - [Dialog Icons](#)
 - [Layer Control Panel](#)
 - [The Dialog Box](#)
 - [The Toolbar](#)
- [Customizing xpswmm](#)
 - [File Names, Extensions and Paths](#)
 - [The .ini File](#)
 - [swmxi.ini File Variables](#)
- [Creating a Model](#)
 - [Setup Wizard](#)
 - [Building the Runoff and 1D Hydraulic Layers](#)
 - [Navigating the Network](#)
 - [Using Background Images](#)
 - [Copying and Pasting Data](#)
 - [Topography Layers and Objects](#)
 - [2D Object Creation](#)
 - [2D Domains](#)
 - [GIS Layers](#)
 - [CAD Layers](#)
- [Links](#)
 - [Multiple Conduits or Diversion Links](#)
 - [Hydraulics Layer Orifice Diversion](#)
 - [Hydraulics Layer Pump Diversion](#)
 - [Hydraulics Layer Weir Diversion](#)
 - [Runoff Orifice Diversions](#)
 - [Runoff Weir Diversions](#)
 - [Sanitary Layer Pump Diversions](#)
 - [Sanitary Layer Weir Diversion](#)
 - [Special Conduits](#)
 - [Single Conduit Link Data](#)
- [Node Data](#)
 - [Hydraulics Node Data](#)
 - [Runoff Node Data](#)
 - [Runoff Routing Methods](#)
 - [Runoff Sub-Catchment Data](#)
 - [Sanitary Node Data](#)
 - [Storage Treatment Plant](#)
- [Common 2D modelling errors](#)

- References
 - Configuration Keywords
 - Mannings n Roughness Coefficients - Closed Conduits
 - Mannings N Roughness Coefficients - Open Channel
 - Real Time Control Examples
 - Roughness Coefficients
 - Sample Output File
 - SWMM Theory
 - EXTRAN Theory - Dynamic Wave Solution
 - Partial Differential Equations
 - Finite Difference Equations
 - Implicit Time Weighting
 - Significant Differences between EXTRAN Versions 3, 4 and 5
 - Finite Difference Solution
 - Convergence in EXTRAN
 - Automatic Time Step Selection
 - Special Conduit Flow Conditions
 - Flow and Head Computation during Surge and Flooding
 - Ground and Invert Elevations
 - Flow Control or Diversion Devices
 - Storage Devices, Ponds, and Lakes
 - Orifices
 - Weirs
 - Weirs with Tide Gates
 - Pump Stations
 - Outfall Structures
 - Boundary Conditions
 - Initial Conditions
 - Pit or Junction Losses
 - Oscillations during a Hydraulic Jump
 - Irregular Closed Conduits
 - Irregular Open Channels
 - Kinematic and Diffusion Wave Equations
 - Special Finite Difference Approximations
 - Conduit Depth Calculations
 - Reference Publications
 - Detailed Bed Shear Equations
 - Stream Power
 - Curve Numbers
 - Broad-crested Weir Coefficients
 - Inlet Control Theory
 - TUFLOW.exe Control File - .tcf File
 - Plug Flow Theory
 - Time of Concentration Calculator
- Global Data
 - Buildup and Washoff Data
 - Erosion
 - Groundwater
 - Infiltration
 - Initial Loads
 - Landuse
 - Runoff Pollutants
 - Rainfall
 - Snowmelt
 - Sanitary Pollutant
 - Sewer Dry Weather Flow
 - Sewer Infiltration
 - Waste Stream Temperature
 - Temporal Variation
 - Pump Rating Curve Global Data
 - Pit Rating Curve
 - Hydraulic Brakes
 - Pavement Crossfalls
 - HEC-12 and HEC-22
 - User-Defined Files, Global Data
 - XP Tables Global Data
 - Rational Formula
 - Natural Section Shapes
 - 2D Soil Type
 - 2D Landuses
 - User-defined Conduits
 - Bridge Section Shapes
 - LID - WSUD
 - User Hazard Classifications
 - User Hazard Values
 - Rainfall Derived Inflow and Infiltration - RDII
 - ARR Storm Generator
 - Adding Storms Using the ARR Storm Generator
 - Ensemble Statistics Utility

- Viewing the ARR Storms Data Using the Global Data Dialog
- Editing Storms Using the ARR Storm Generator
- Removing Storms Using the ARR Storm Generator
- Utilities
- Job Control
 - 2D Job Control Settings
 - Hydraulics Mode Job Control
 - Runoff Mode Job Control
 - Sanitary Mode Job Control
- 2D Hydraulic Modeling
- Water Surface Pressure Gradient - WSPG
- Regional Hydrology Methods
 - Colorado Urban Hydrograph Procedure - CUHP Theory
 - LA County Procedure - F0601
 - Sacramento Hydrology Method
- Importing a Drainage Model from 12d
- Integrating 12d with XPSWMM/XPStorm