

Table of Contents

Table of Contents

Welcome to InfoDrainage

What's New

- Improvements in Previous Releases

Getting Started Tutorials

- Getting Started Tutorials - Metric
 - User Interface Overview - Metric
 - Metric Tutorial Chapter 1 - Initial Assessment
 - Metric Tutorial Chapter 2 - Creating the Network
 - Metric Tutorial Chapter 3 - Defining Flow Paths and Pipe Design
 - Metric Tutorial Chapter 4 - Performing Analysis
 - Metric Tutorial Chapter 5 - Adding Storage
 - Metric Tutorial Chapter 6 - Introduction to InfoDrainage for Civil 3D®
- Getting Started Tutorials - USA
 - Introduction Project - USA
 - User Interface Overview - USA
 - (USA) Introduction Chapter 1 - Layout System
 - (USA) Introduction Chapter 2 - Size Mitigation
 - (USA) Introduction Chapter 3 - Review Results
 - (USA) Introduction Chapter 4 - Submit Project
 - Advanced Project - USA
 - (USA) Advanced Chapter 1 - Existing Site
 - (USA) Advanced Chapter 2 - Developed Site
 - (USA) Advanced Chapter 3 - Layout Treatment System
 - (USA) Advanced Chapter 4 - Results
 - (USA) Advanced Chapter 5 - Sizing of Treatment System

Background (Reference/Theory)

- Manning Formula
- Colebrook-White Formula
- Rainfall Map
- RED (Rainfall) File Format
- Unit Hydrograph
- Index Flood and Adjustment for Return Period
- Runoff Generation
 - Green Roof Runoff Method
 - Time of Concentration
 - Time Of Concentration Calculator
 - Friend's Equation
 - Alameda Method
 - Bransby Williams Method
 - Izzard's Formula
 - Kerby's Equation
 - Kinematic Wave
 - Kirpich's Equation
 - US Federal Aviation Authority
 - TR-55 Methods
 - SCS
 - Curve Number Calculator
 - Santa Barbara Urban Hydrograph
 - Time Area Diagram
 - UK Unit Hydrographs
 - FSR Unit Hydrograph
 - FEH Unit Hydrograph
 - ReFH Unit Hydrograph
 - ReFH2 Unit Hydrograph
 - Laurenson
 - Simplified Modified Rational Method
- MicroDrainage File Support
 - MDX File Format
 - Storage Structures
 - Flow Controls
 - MDSX File Format
 - SRCX / CASX File Formats
- Analysis
 - Analysis of Junctions and Connections
 - Analysis of Stormwater Controls
 - Rainwater Tank Analysis
 - Simulation Health
- Language Translation
 - Translation Administrator
 - Units Translation

- Guidance on Conductivity Rates

Installation Guide

- System Requirements
- Licensing
- InfoDrainage Tiers
- Installing InfoDrainage
- Installing InfoDrainage for Civil 3D®
- Uninstalling InfoDrainage

Navigating the Interface

- Ribbons
- Background Data
- Background Images
- World Files
- Views
 - Plan
 - Plot Scale
 - Tree View
 - Properties
 - Phases
 - Phase Management
 - Phase Selector
 - Profile
 - Flow Paths
 - Numbering Scheme
 - Networks
 - Add Train / Add Network
 - Toolbox
 - Data Legend
 - Quick Access Toolbar
 - Unit Selection
 - Autosave - Recovery
 - OK / Cancel / Apply
- Graph Tools
- Results Graphs
- Status Bar

Ribbons in Detail

- File Menu
 - Preferences
 - Regionalisation
 - Object Templates
 - Change Templates
 - Transmit Design
 - Hard Copy Headings
 - Print
 - Plot Profile
 - Project Templates
- Plan Ribbon
 - Ruler
 - Bookmarks
 - Display Settings
- Import Ribbon
 - Surface Data
 - XYZS Files
 - LandXML Files
 - ASC Files
 - PWF Files
 - IDSX Files
 - Trim Surface
 - Load CAD Wizard
 - Load GIS Wizard
 - Import Design
 - Import Pipe Network
 - Imports Options
 - Import Summary
 - GIS Import Wizard
 - CSV Import Wizard
- Rainfall Ribbon
 - SCS Rainfall Method
 - FEH Rainfall
 - FSR Rainfall
 - Australian Rainfall and Runoff
 - Desbordes Rainfall
 - Chinese Rainfall
 - User Defined Rainfall
 - Known Rainfall

- Rainfall Manager
 - Temporal Pattern
 - IDF
 - Storm Durations
- Pollutants
 - Pollution Concentration
 - Pollutant Removal Methods
 - Percentage Removal
 - First Order Decay
- Rainfall Viewer
- Preliminary Sizing Ribbon
 - Deluge
 - Network Design Criteria
 - Network Design
 - Pipe Size Library
 - Methode de Caquot
 - Auto Size Calculations
 - Manhole Size Library
 - Manhole Auto Size Calculations
 - Network Design Report
 - Synchronise Manhole Invert Levels
 - Inlets
 - Inlets Form
 - Low/High Flow
 - Rated by Flow
 - HEC-22 Inlets
 - Quick Storage Estimate Calculator
 - Water Quality Calculator
 - First Flush Calculator
 - UK and Ireland Rural Runoff Calculator
 - ICP SUDS / IH 124 Methods
 - ADAS 345 Method
 - FEH Method
 - ReFH2 Method
 - Greenfield Runoff Volume Method
 - Growth Curve Editor
 - UK and Ireland Region Picker
 - Methode des Pluies Calculator
- Build Ribbon
 - Inflows
 - Catchment Area
 - Runoff Coefficient Calculator
 - Hydrograph
 - Universal Importer
 - Rainwater Tank
 - Tank Calculator
 - Junctions
 - Manhole
 - Simple Junction
 - Outlets
 - Depth Flow
 - Filtration
 - Flap Valve
 - Gate
 - Harvest Flow
 - Level Controlled Pump
 - Multiple
 - Orifice
 - Pump
 - Siphon
 - V-Notch Weir
 - Weir
 - Under Drain
 - Hydro-Brake
 - Stormwater Controls - SWC
 - Bioretention
 - Cellular Storage
 - Chamber
 - Infiltration Trench
 - Pond
 - Porous Paving
 - Soakaway
 - Swale
 - Tank
 - Stormwater Control Sizing Calculator
 - Connections
 - Box Culvert
 - Custom Connection
 - Define Cross Section

- Lagged Flow
 - No Delay
 - Pipe Connection
 - Rectangular Channel
 - Trapezoidal Channel
 - Triangular Channel
- Analysis Ribbon
 - Analysis Criteria
 - Outfalls
 - Validate
 - Go
- Results Ribbon
 - Tables
 - Area Summary
 - Manhole Schedule
 - Take Off Data
 - Audit Report
 - Inflows Summary
 - Junctions Summary
 - Stormwater Controls Summary
 - Connections Summary
 - Phase Management Results
 - Inflow - Item Results
 - Junctions - Item Results
 - Stormwater Controls - Item Results
 - Connection - Item Results
 - Comparison Report
- Export Ribbon
 - To CAD
 - To Image
 - MDX Export
 - GIS Export Wizard
 - Export Pipe Network
 - CSV Export Wizard
- Help Ribbon
- Context Sensitive Ribbons

InfoDrainage for Civil 3D®

- Export To InfoDrainage
- Import From InfoDrainage
- Part Mapping Manager
- Representation of Unsupported Data