

# Table of Contents

## Table of Contents

### Welcome to InfoDrainage

### What's New

- Improvements in Previous Releases

### Getting Started Tutorials

- Getting Started Tutorials - Metric
  - User Interface Overview - Metric
  - Metric Tutorial Chapter 1 - Initial Assessment
  - Metric Tutorial Chapter 2 - Creating the Network
  - Metric Tutorial Chapter 3 - Defining Flow Paths and Pipe Design
  - Metric Tutorial Chapter 4 - Performing Analysis
  - Metric Tutorial Chapter 5 - Adding Storage
  - Metric Tutorial Chapter 6 - Introduction to InfoDrainage for Civil 3D®
- Getting Started Tutorials - USA
  - Introduction Project - USA
    - User Interface Overview - USA
    - (USA) Introduction Chapter 1 - Layout System
    - (USA) Introduction Chapter 2 - Size Mitigation
    - (USA) Introduction Chapter 3 - Review Results
    - (USA) Introduction Chapter 4 - Submit Project
  - Advanced Project - USA
    - (USA) Advanced Chapter 1 - Existing Site
    - (USA) Advanced Chapter 2 - Developed Site
    - (USA) Advanced Chapter 3 - Layout Treatment System
    - (USA) Advanced Chapter 4 - Results
    - (USA) Advanced Chapter 5 - Sizing of Treatment System

### Background (Reference/Theory)

- Manning Formula
- Colebrook-White Formula
- Rainfall Map
- RED (Rainfall) File Format
- Unit Hydrograph
- Index Flood and Adjustment for Return Period
- Runoff Generation
  - Green Roof Runoff Method
  - Time of Concentration
  - Time Of Concentration Calculator
    - Friend's Equation
    - Alameda Method
    - Bransby Williams Method
    - Izzard's Formula
    - Kerby's Equation
    - Kinematic Wave
    - Kirpich's Equation
    - US Federal Aviation Authority
    - TR-55 Methods
  - SCS
    - Curve Number Calculator
  - Santa Barbara Urban Hydrograph
  - Time Area Diagram
  - UK Unit Hydrographs
  - FSR Unit Hydrograph
  - FEH Unit Hydrograph
  - ReFH Unit Hydrograph
  - ReFH2 Unit Hydrograph
  - Laurenson
  - Simplified Modified Rational Method
- MicroDrainage File Support
  - MDX File Format
  - Storage Structures
  - Flow Controls
  - MDSX File Format
  - SRCX / CASX File Formats
- Analysis
  - Analysis of Junctions and Connections
  - Analysis of Stormwater Controls
  - Rainwater Tank Analysis
  - Simulation Health
- Language Translation
  - Translation Administrator
  - Units Translation

- Guidance on Conductivity Rates

## Installation Guide

- System Requirements
- Licensing
- InfoDrainage Tiers
- Installing InfoDrainage
- Installing InfoDrainage for Civil 3D®
- Uninstalling InfoDrainage

## Navigating the Interface

- Ribbons
- Background Data
- Background Images
- World Files
- Views
  - Plot Scale
  - Phases
    - Phase Management
    - Phase Selector
  - Profile
  - Flow Paths
    - Numbering Scheme
  - Networks
  - Add Train / Add Network
  - Data Legend
  - Quick Access Toolbar
  - Unit Selection
  - Autosave - Recovery
  - OK / Cancel / Apply
- Graph Tools
- Results Graphs
- Status Bar

## Ribbons in Detail

- File Menu
  - Preferences
    - Regionalisation
  - Object Templates
    - Change Templates
  - Transmit Design
  - Hard Copy Headings
  - Print
  - Plot Profile
  - Project Templates
- Plan Ribbon
  - Ruler
  - Bookmarks
- Import Ribbon
  - Surface Data
    - XYZS Files
    - LandXML Files
    - ASC Files
    - PWF Files
    - IDXS Files
    - Trim Surface
  - Load CAD Wizard
  - Load GIS Wizard
  - Import Design
  - Import Pipe Network
    - Imports Options
    - Import Summary
  - GIS Import Wizard
  - CSV Import Wizard
- Rainfall Ribbon
  - SCS Rainfall Method
  - FEH Rainfall
  - FSR Rainfall
  - Australian Rainfall and Runoff
  - Desbordes Rainfall
  - Chinese Rainfall
  - User Defined Rainfall
  - Known Rainfall
  - Rainfall Manager
    - Temporal Pattern
    - IDF
    - Storm Durations
  - Pollutants

- Pollution Concentration
  - Pollutant Removal Methods
  - Percentage Removal
  - First Order Decay
- Rainfall Viewer
- Preliminary Sizing Ribbon
  - Deluge
  - Network Design Criteria
  - Network Design
    - Pipe Size Library
    - Methode de Caquot
    - Auto Size Calculations
    - Manhole Size Library
    - Manhole Auto Size Calculations
  - Network Design Report
  - Synchronise Manhole Invert Levels
  - Inlets
    - Inlets Form
    - Low/High Flow
    - Rated by Flow
    - HEC-22 Inlets
  - Quick Storage Estimate Calculator
  - Water Quality Calculator
  - First Flush Calculator
  - UK and Ireland Rural Runoff Calculator
    - ICP SUDS / IH 124 Methods
    - ADAS 345 Method
    - FEH Method
    - ReFH2 Method
    - Greenfield Runoff Volume Method
    - Growth Curve Editor
    - UK and Ireland Region Picker
  - Methode des Pluies Calculator
- Build Ribbon
  - Inflows
    - Catchment Area
    - Runoff Coefficient Calculator
    - Hydrograph
    - Universal Importer
    - Rainwater Tank
    - Tank Calculator
  - Junctions
    - Manhole
    - Simple Junction
  - Outlets
    - Depth Flow
    - Filtration
    - Flap Valve
    - Gate
    - Harvest Flow
    - Level Controlled Pump
    - Multiple
    - Orifice
    - Pump
    - Siphon
    - V-Notch Weir
    - Weir
    - Under Drain
    - Hydro-Brake
  - Stormwater Controls - SWC
    - Bioretention
    - Cellular Storage
    - Chamber
    - Infiltration Trench
    - Pond
    - Porous Paving
    - Soakaway
    - Swale
    - Tank
    - Stormwater Control Sizing Calculator
  - Connections
    - Box Culvert
    - Custom Connection
      - Define Cross Section
    - Lagged Flow
    - No Delay
    - Pipe Connection
    - Rectangular Channel
    - Trapezoidal Channel

- Triangular Channel
- Analysis Ribbon
  - Analysis Criteria
  - Outfalls
  - Validate
  - Go
- Results Ribbon
  - Tables
  - Area Summary
  - Manhole Schedule
  - Take Off Data
  - Audit Report
  - Inflows Summary
  - Junctions Summary
  - Stormwater Controls Summary
  - Connections Summary
  - Phase Management Results
  - Inflow - Item Results
  - Junctions - Item Results
  - Stormwater Controls - Item Results
  - Connection - Item Results
  - Comparison Report
- Export Ribbon
  - To CAD
  - To Image
  - MDX Export
  - GIS Export Wizard
  - Export Pipe Network
  - CSV Export Wizard
- Views Ribbon
  - Tree View
  - Plan
  - 3D
  - Toolbox
  - Properties
  - Display Settings
  - Change Layout
- Help Ribbon
- Context Sensitive Ribbons

#### InfoDrainage for Civil 3D®

- Export To InfoDrainage
- Import From InfoDrainage
- Part Mapping Manager
- Representation of Unsupported Data